FORM MS2986 REV M 06/01/2012
REPLACES FORM MS2986 REV L 01/23/2012
FILE IN SECT. 2 OF SERVICE MANUAL

Illustrated Parts List

Model Series

406700

TYPE NUMBERS
0027 THROUGH 6959.

TABLE OF CONTENTS

Air Cleaner 7
Alternator 9
Blower Housing 7
Camshaft 2
Carburetor 6
Controls 8
Crankshaft 2
Cylinder 2
Cylinder Head 5
Electric Starter 9
Engine Sump 3
Flywheel 8
Fuel Supply 6
Gasket Set - Engine 4
Gasket Set - Valve 5
Governor Spring 8
Ignition 9
Intake Manifold 5
Kit - Carburetor Overhaul 6
Lubrication 4
Piston, Rings, Connecting Rod 2
Valves 5

Not for Reproduction

PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

406700

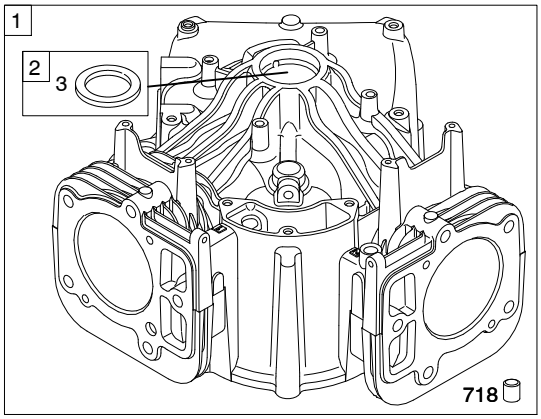

1319 WARNING LABEL

REQUIRED *when replacing parts with warning labels affixed.*

1319A WARNING LABEL

REQUIRED *when replacing parts with warning labels affixed.*

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

1036 EMISSIONS LABEL

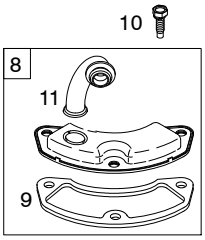



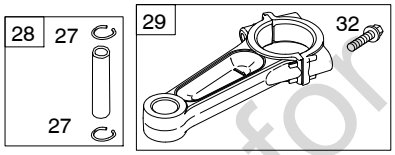

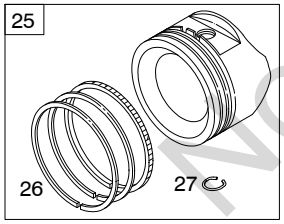

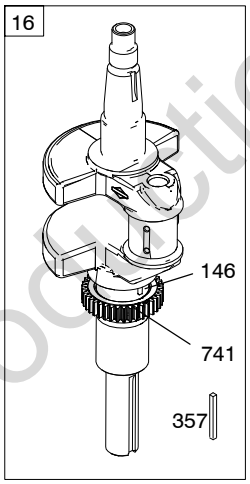

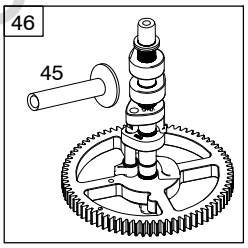

24

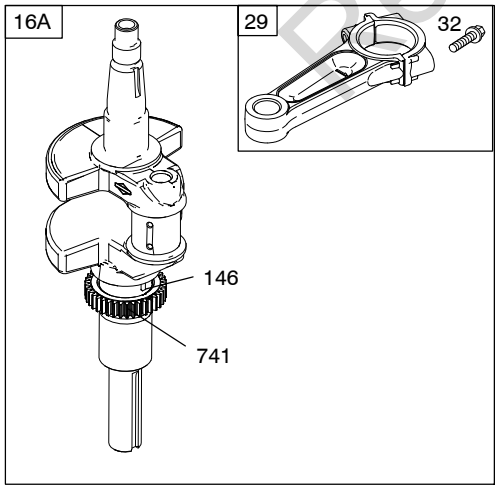

Not for Reproduction

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

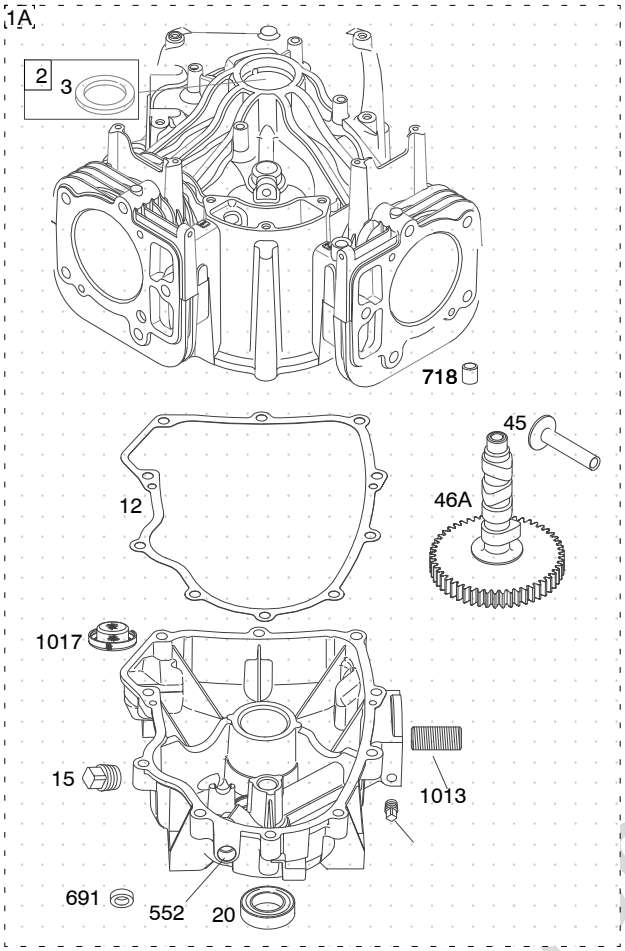

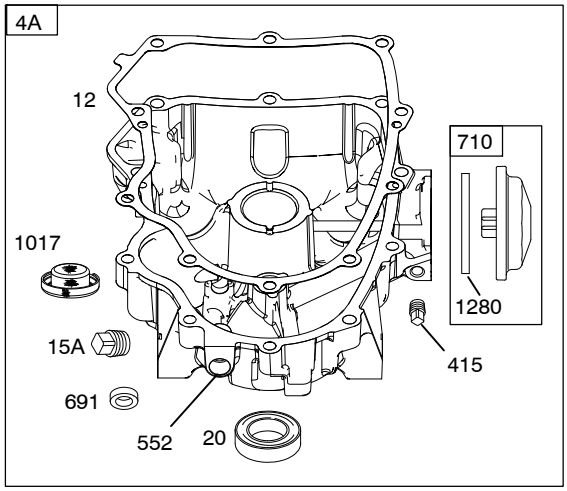

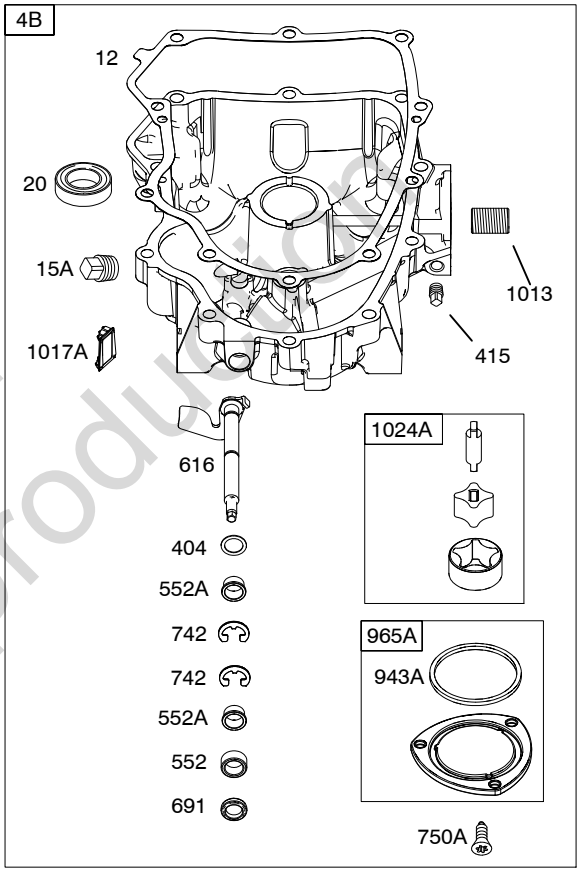

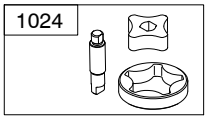



Not for Reproduction

406700

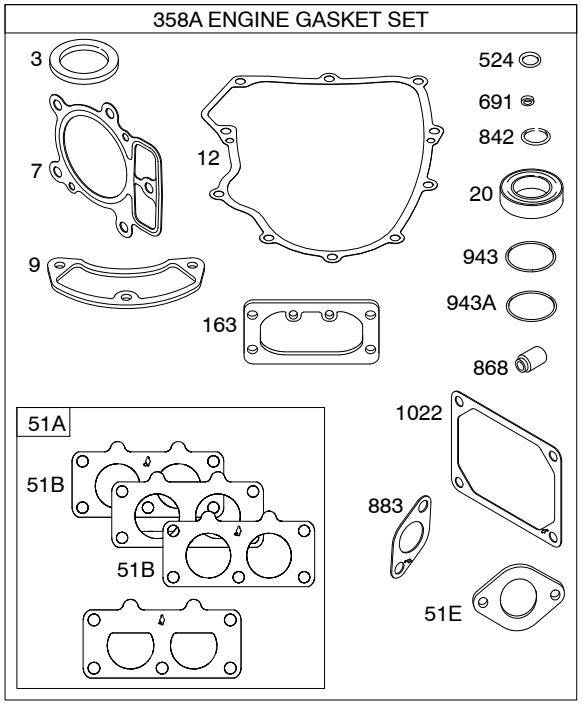

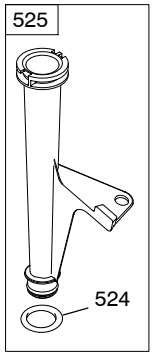

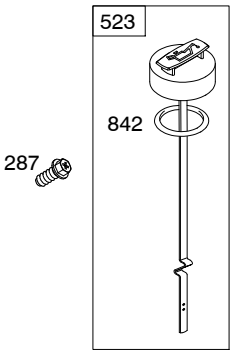

Not for Reproduction

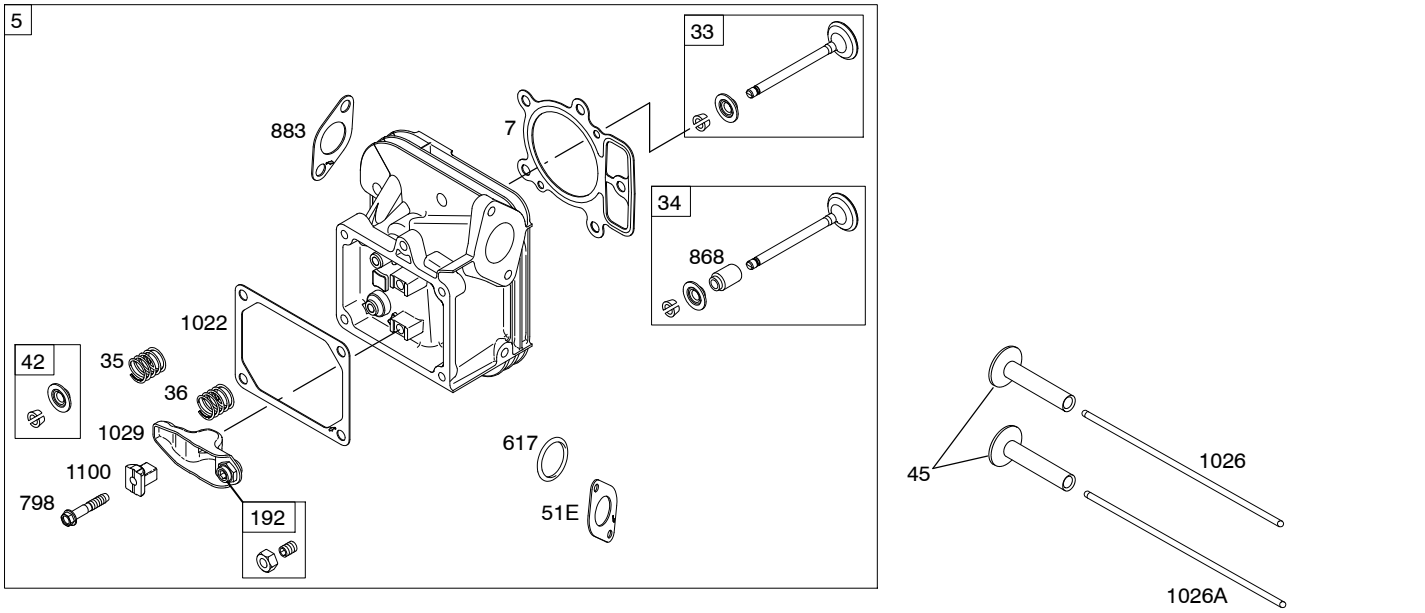

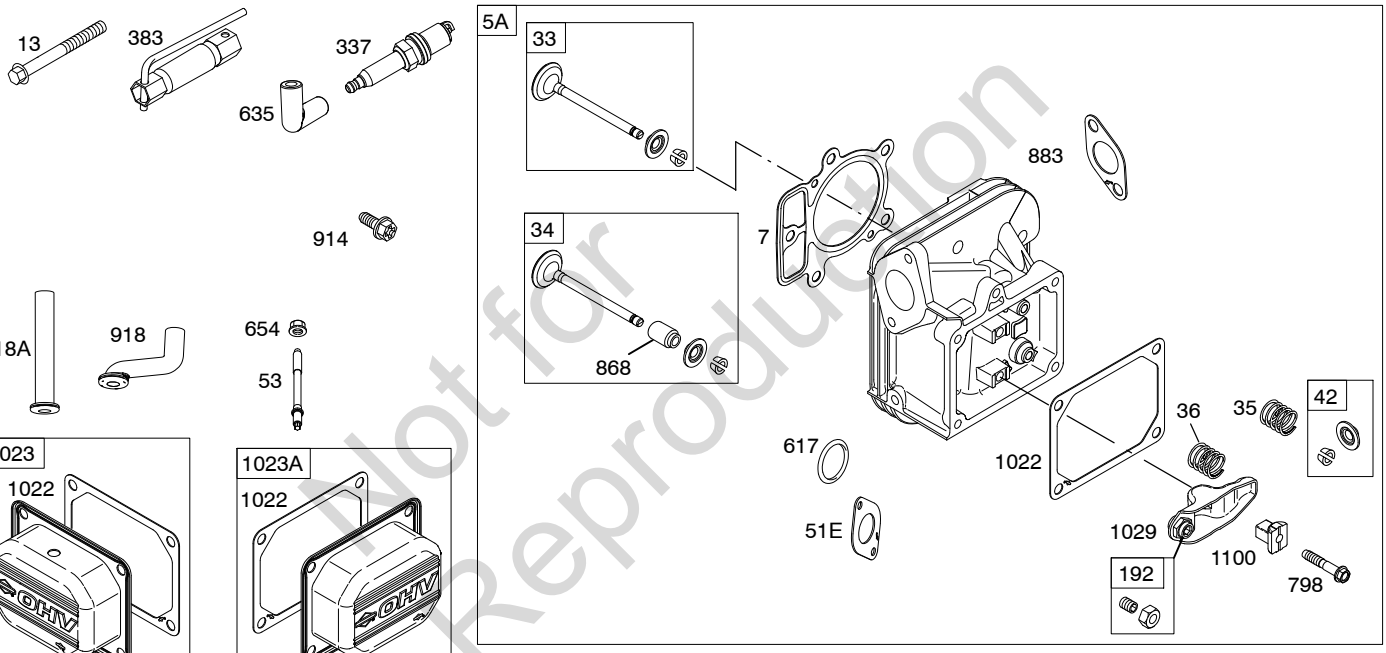

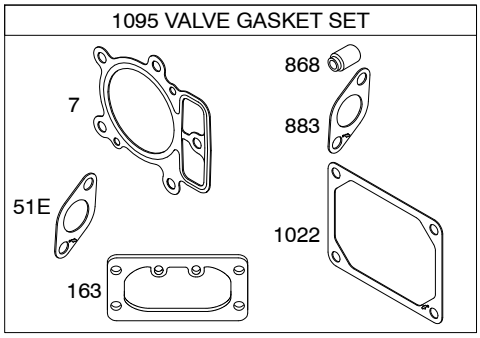

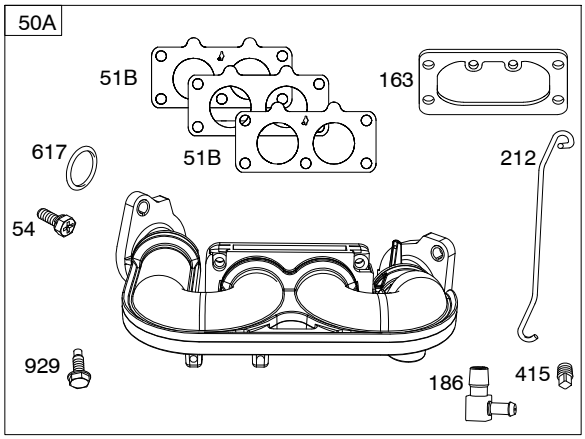

Not for Reproduction

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

406700

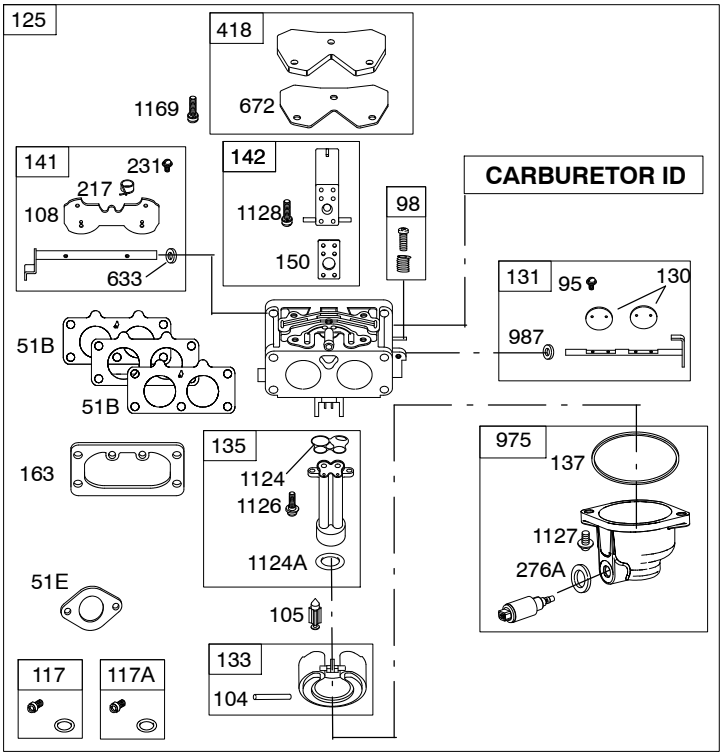

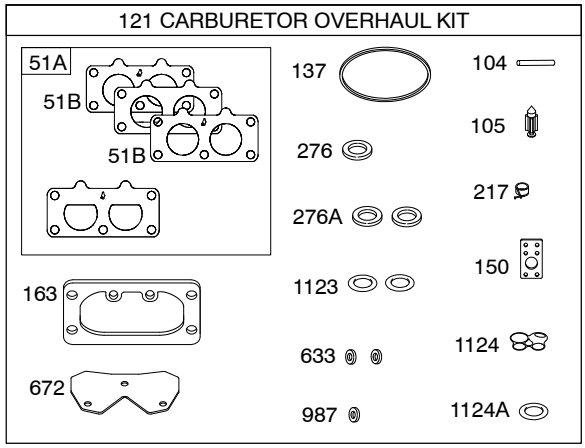



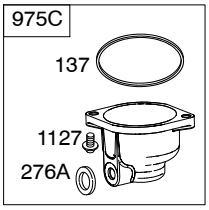



NOTE: Carburetor Illustrations Represents Several Carburetors. Parts Shown In The Service Box May Not Be Included In All Kits.

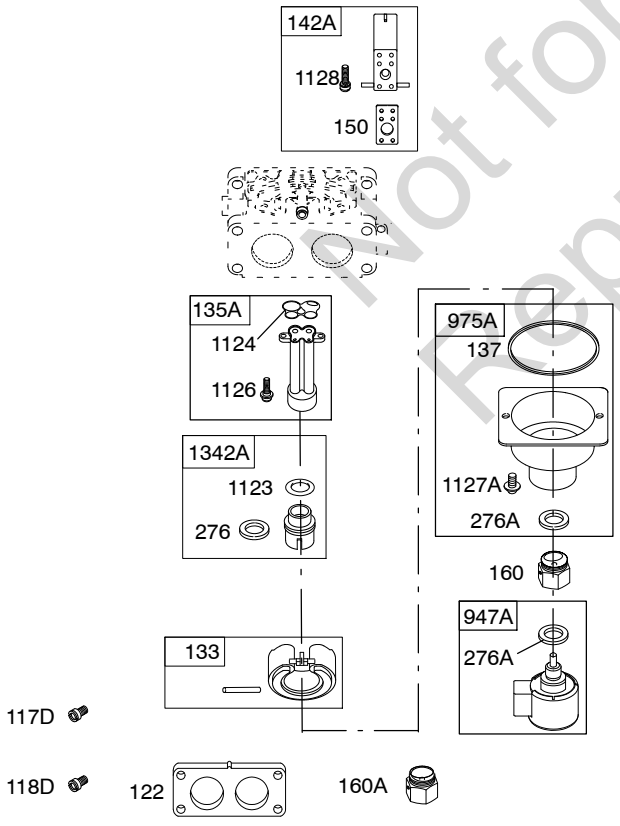

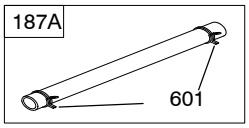

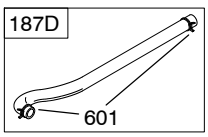

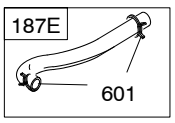

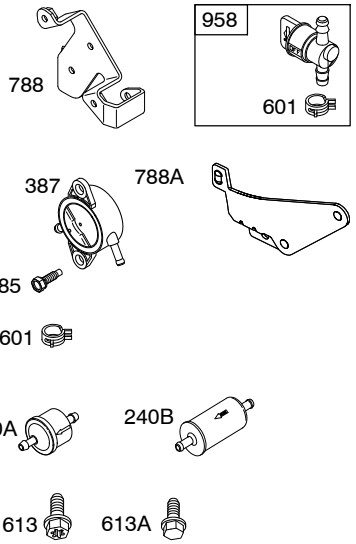

Not for Reproduction

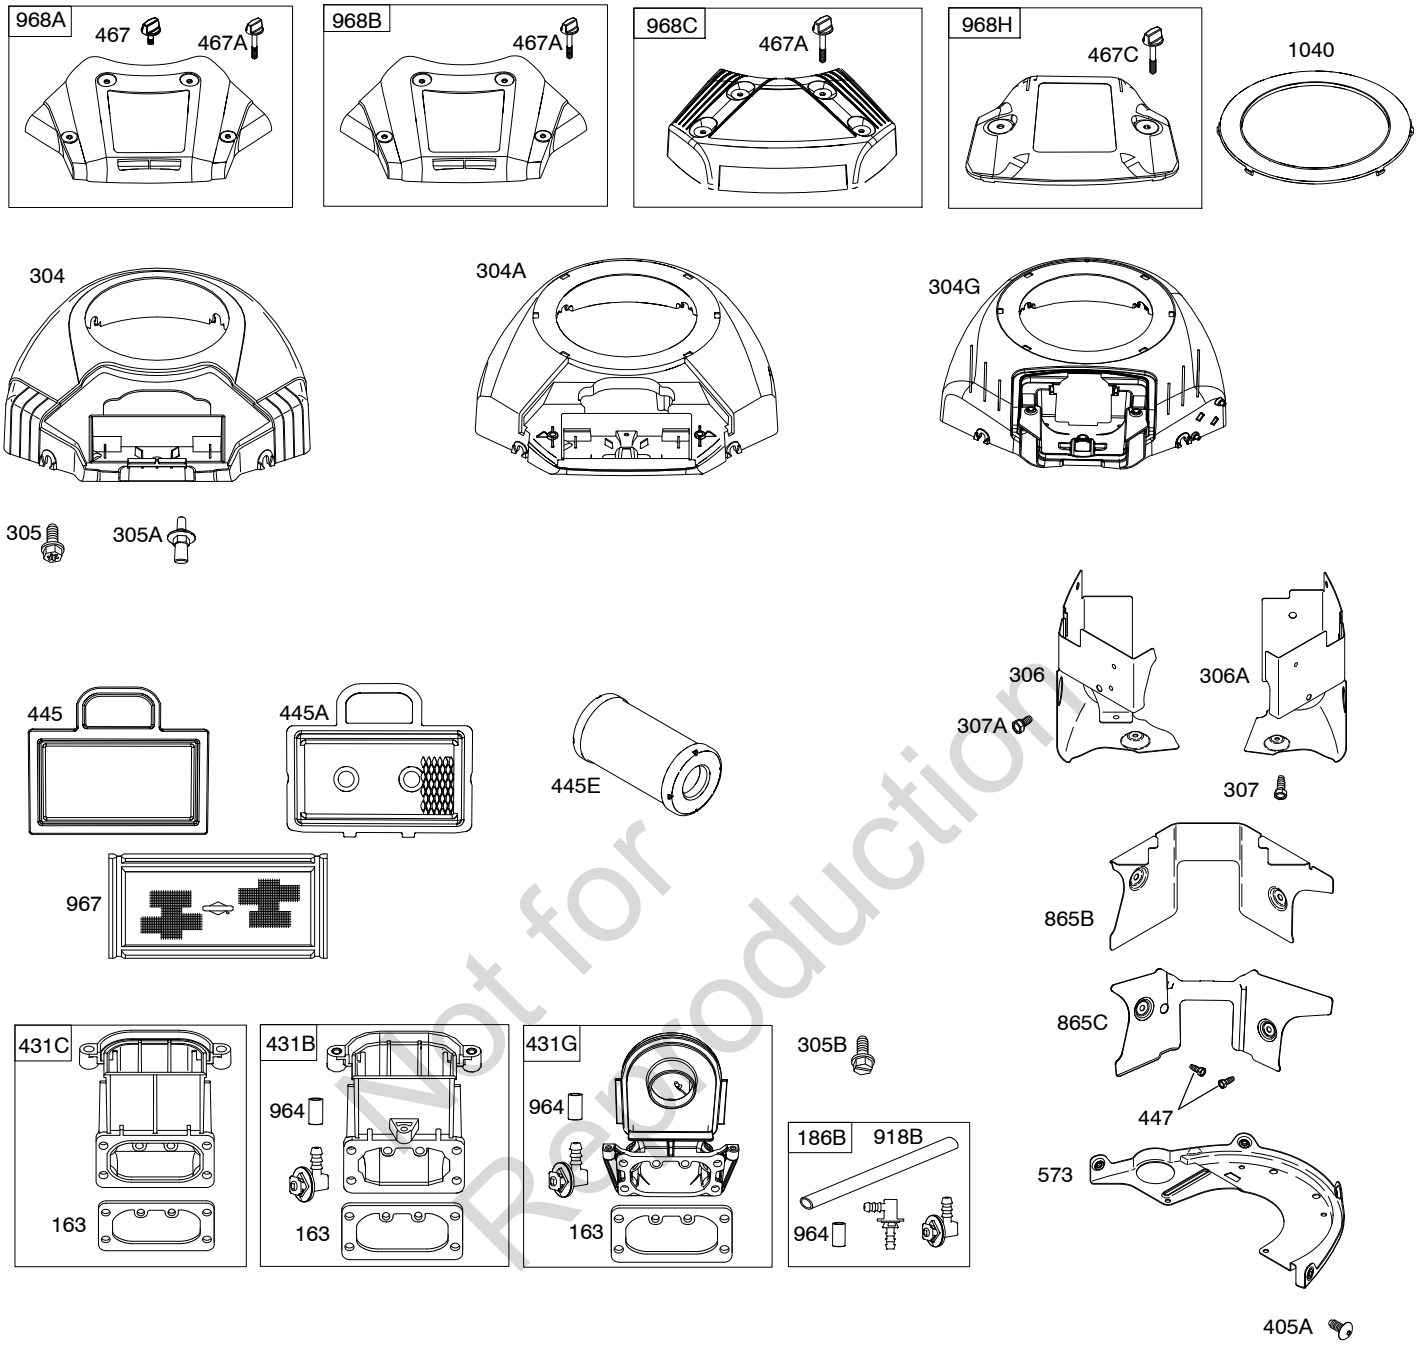

Not for Reproduction

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

406700

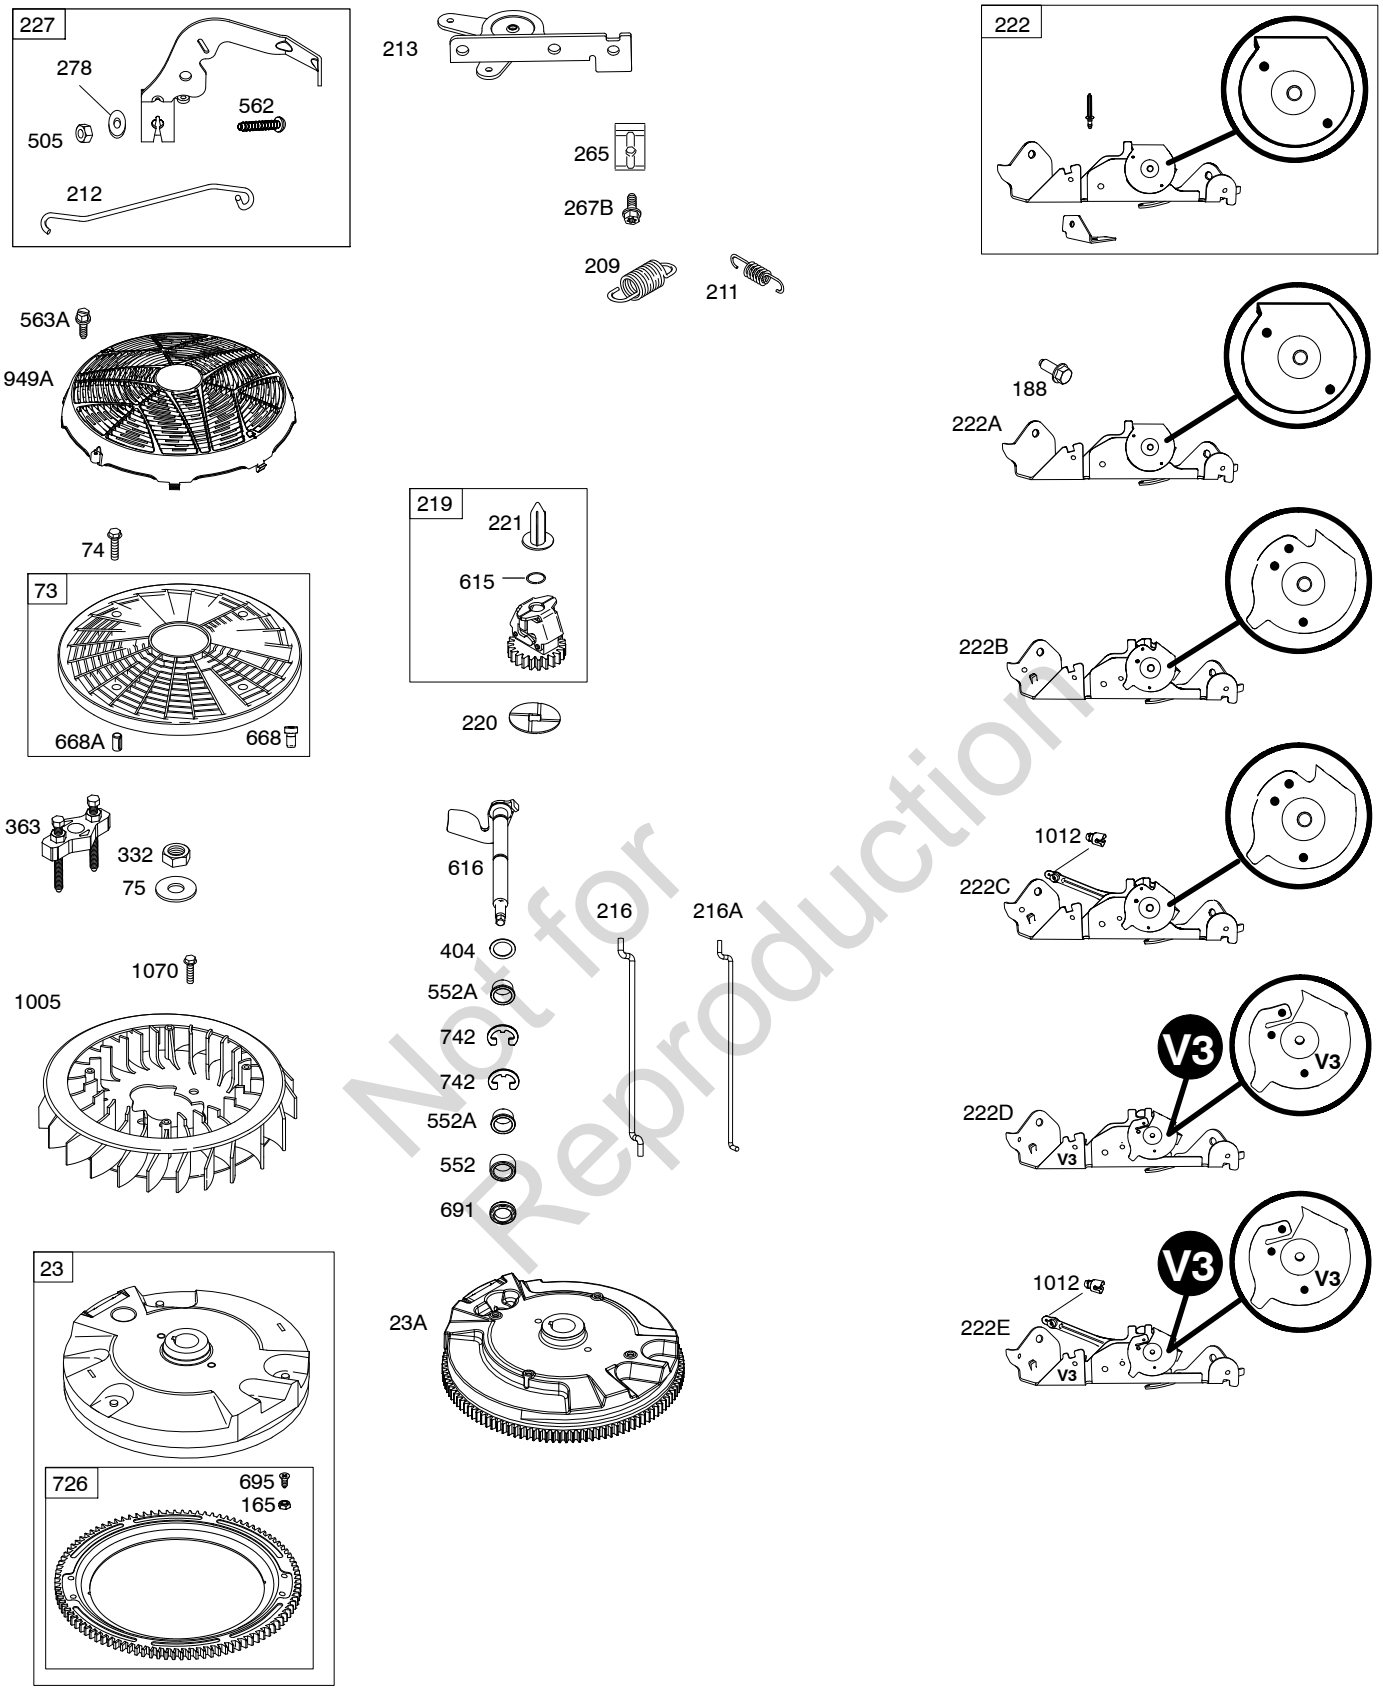

Not for Reproduction

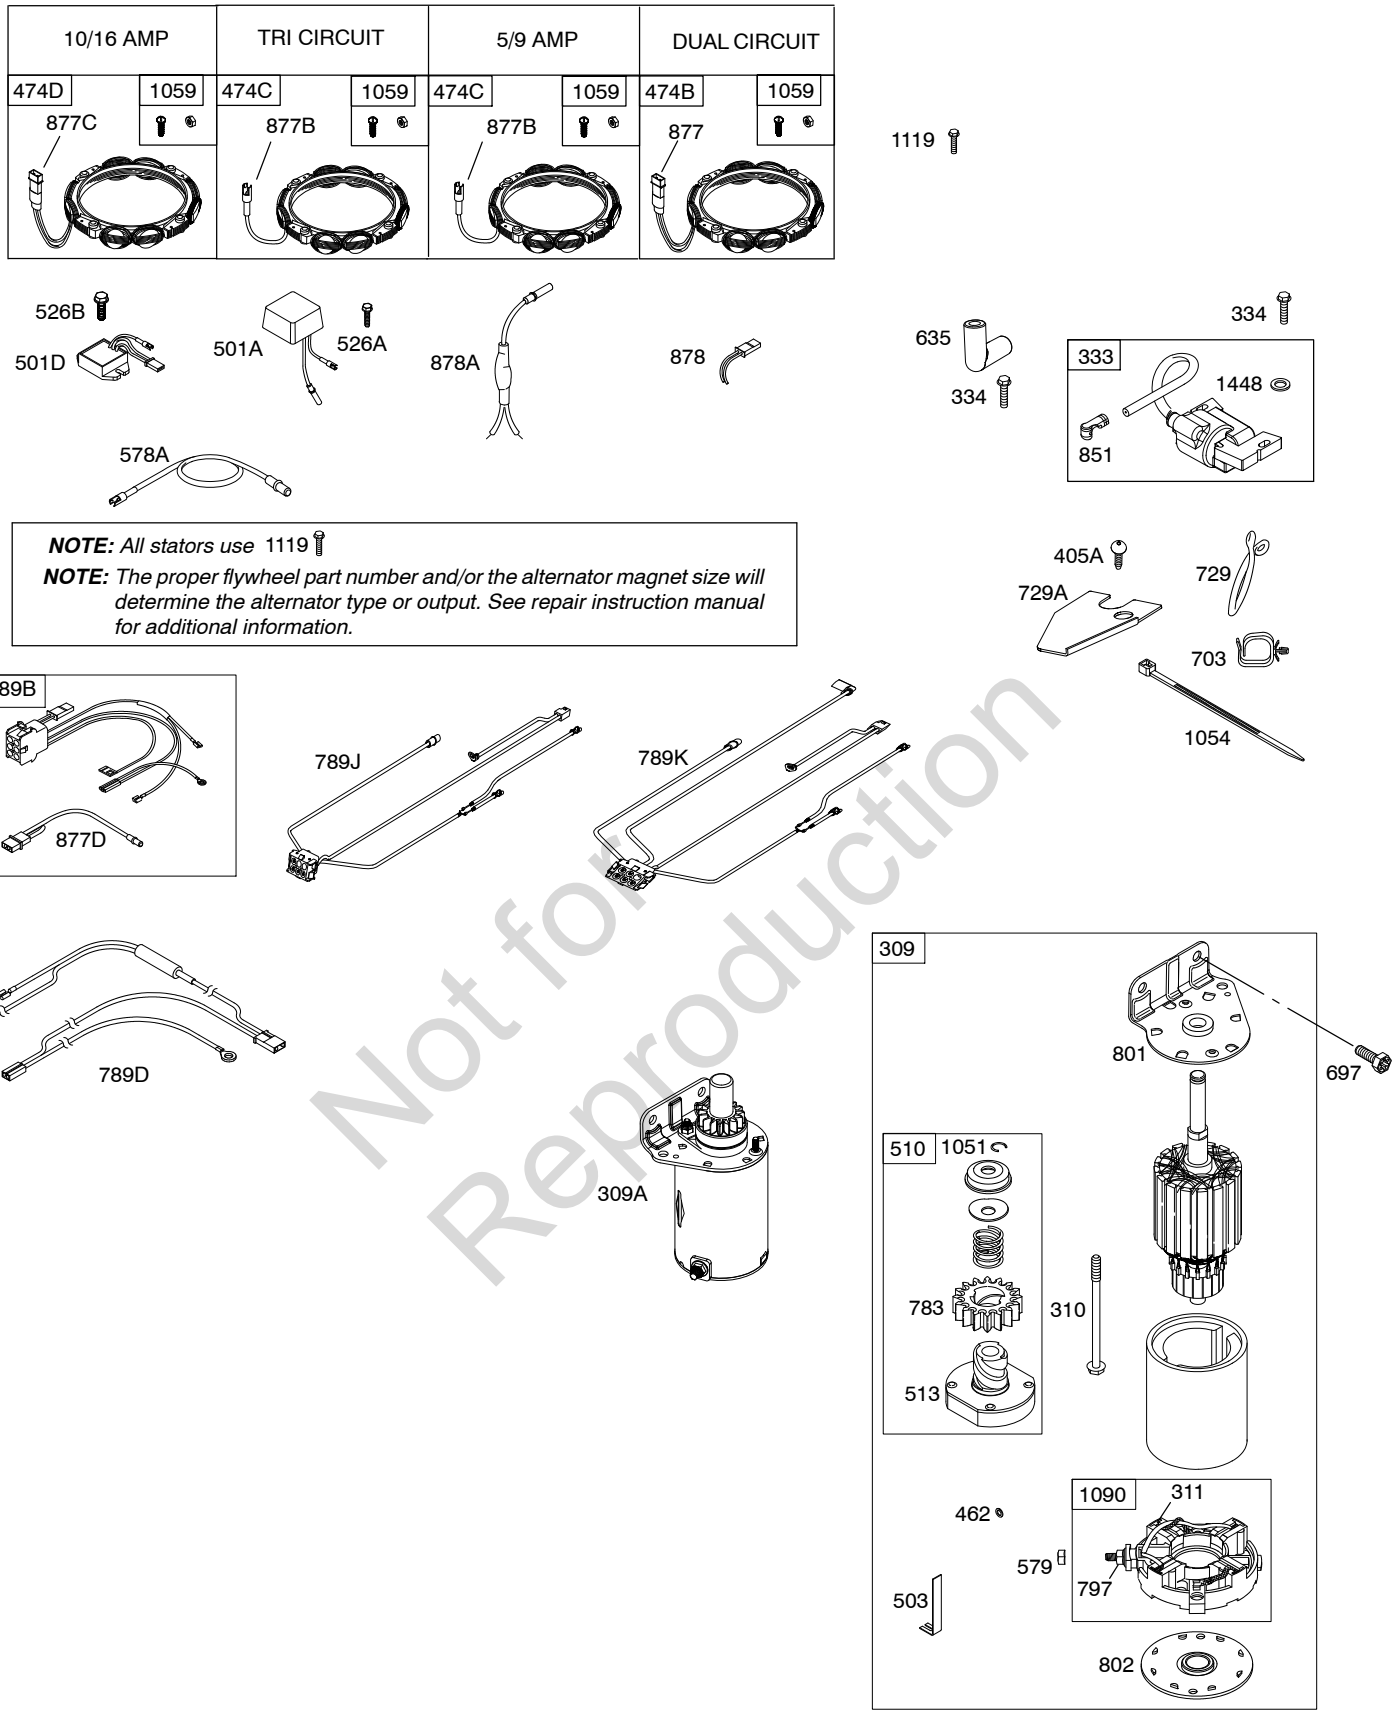

NOTE: *All stators use* 1119

NOTE: *The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.*

Not for Reproduction

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

406700

REF. NO.	PART NO.	DESCRIPTION
1	**591694**	Cylinder Assembly (Used After Code Date 12051300)
		------ Note ------
		795118 Cylinder Assembly (Used After Code Date 07070900 and Before Code Date 12051400).
		699751 Cylinder Assembly (Used After Code Date 03082800 and Before Code Date 07100700).
1A		Cylinder Assembly (Used Before Code Date 03082900). (Contact An Authorized Briggs And Stratton Dealer For A Shortblock Replacement)
2	**797673**	Kit-Bushing/Seal (Magneto Side)
3	**391086S**	Seal-Oil (Magneto Side)
4A	**699752**	Sump-Engine Used on Type No(s). 0102.
4B	**796307**	Sump-Engine (Used After Code Date 03082800).
		------ Note ------
		Sump-Engine (Used Before Code Date 03082900). (Contact An Authorized Briggs And Stratton Dealer For A Shortblock Replacement)
5	**796231**	Head-Cylinder (Cylinder #1)
5A	**796232**	Head-Cylinder (Cylinder #2)
7	**693997**	Gasket-Cylinder Head
8	**792185**	Breather Assembly
9	**690937**	Gasket-Breather
10	**691108**	Screw (Breather Assembly)
11	**792184**	Tube-Breather
12	**697227**	Gasket-Crankcase
13	**793988**	Screw (Cylinder Head) (Used After Code Date 08063000).
		------ Note ------
		791130 Screw (Cylinder Head) (Used Before Code Date 08070100).
15	**691680**	Plug-Oil Drain (Used Before Code Date 08071800).
15A	**690946**	Plug-Oil Drain (Used After Code Date 08071700).
16	**796237**	Crankshaft
16A	**699701**	Crankshaft (Includes Connecting Rod) (Used Before Code Date 04010900).
20	**795387**	Seal-Oil (PTO Side)
22	**694966**	Screw (Crankcase Cover/Sump)
23	**691053**	Flywheel
		------ Note ------
		691054 Flywheel Used on Type No(s). 0100, 0102, 0108, 0115, 0116, 0132, 0136, 0164, 0165, 0442, 0496, 0503, 0579, 0686, 0724, 0737, 0802, 0803, 0872, 0885, 0888, 0959, 0960, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 4442, 5271, 5442, 6132, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
23A	**799090**	Flywheel Used on Type No(s). 0173, 5113, 5121, 5169, 5170, 6113, 6121, 6169, 6173.
24	**222698S**	Key-Flywheel
25	**793647**	Piston Assembly (Standard)
		793648 Piston Assembly (.020" Oversize)
26	**791787**	Ring Set (Standard) (Used After Code Date 06082300).
		------ Note ------
		499604 Ring Set (Standard) (Used Before Code Date 06082400).
		793650 Ring Set (.020" Oversize) (Used After Code Date 06082300).
		499606 Ring Set (.020" Oversize) (Used Before Code Date 06082400).
27	**690975**	Lock-Piston Pin
28	**690229**	Pin-Piston (Standard)
29	**796209**	Rod-Connecting (Standard) (Used After Code Date 04010800).
		------ Note ------
		Rod-Connecting (For Replacement Connecting Rod, See Reference 16A) (Used Before Code Date 04010900).
32	**690976**	Screw (Connecting Rod)
33	**697576**	Valve-Exhaust
34	**792200**	Valve-Intake
35	**694865**	Spring-Valve (Intake)
36	**694865**	Spring-Valve (Exhaust)

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
42	**499586**	Keeper-Valve
45	**690977**	Tappet-Valve
46	**790562**	Camshaft (Used After Code Date 03082800).
		------ Note ------
46A		Camshaft (Used Before Code Date 03082900). (Contact An Authorized Briggs And Stratton Dealer For A Shortblock Replacement)
50A	**591784**	Manifold-Intake (Used After Code Date 12040200).
		------ Note ------
		695241 Manifold-Intake (Used Before Code Date 12040300).
51A	**795123**	Gasket-Intake
51B	**690950**	Gasket-Intake
51E	**690949**	Gasket-Intake
53	**690951**	Stud (Carburetor)
54	**699816**	Screw (Intake Manifold)
73	**494439**	Screen-Rotating
74	**698425**	Screw (Rotating Screen)
75	**691056**	Washer (Flywheel)
95	**690718**	Screw (Throttle Valve)
98	**699721**	Kit-Idle Speed
104	**694918**	Pin-Float Hinge
105	**797410**	Valve-Float Needle
108	**699723**	Valve-Choke

REF. NO.	PART NO.	DESCRIPTION
117	**791501**	Jet-Main (Standard)(Left) (Nikki) Used on Type No(s). 0100, 0102, 0113, 0121, 0132, 0163, 0164, 0165, 0167, 0168, 0169, 0170, 0172, 0173, 0442, 0496, 0503, 0579, 0686, 0724, 0737, 0784, 0802, 0803, 0832, 0885, 0888, 0872, 0954, 0958, 0959, 0960, 1163, 1216, 1239, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5113, 5121, 5169, 5170.
		------ Note ------
		792296 Jet-Main (Standard)(Left) (Nikki) Used on Type No(s). 5216, 5271, 5442, 6113, 6121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
		791501 Jet-Main (Standard)(Left) (Nikki) (Used After Code Date 04091400). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160.
		791501 Jet-Main (Standard)(Left) (Nikki) (Used After Code Date 04080300). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162.

REF. NO.	PART NO.	DESCRIPTION
		791501 Jet-Main (Standard)(Left) (Nikki) (Used Before Code Date 04071200 and After Code Date 04080300). Used on Type No(s). 0139.
117A	**791502**	Jet-Main (Standard)(Right) (Nikki) Used on Type No(s). 0100, 0102, 0113, 0121, 0132, 0163, 0164, 0165, 0167, 0168, 0169, 0170, 0172, 0173, 0442, 0496, 0503, 0579, 0686, 0724, 0737, 0784, 0802, 0803, 0832, 0885, 0888, 0872, 0954, 0958, 0959, 0960, 1163, 1216, 1239, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5113, 5121, 5169, 5170.
		------ Note ------
		791502 Jet-Main (Standard)(Right) (Nikki) Used on Type No(s). 5216, 5271, 5442, 6113, 6121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
		791502 Jet-Main (Standard)(Right) (Nikki) (Used After Code Date 04091400). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160.

Not for Reproduction

406700

REF. NO.	PART NO.	DESCRIPTION
		791502 Jet-Main (Standard)(Right) (Nikki) (Used After Code Date 04080300). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162.
		791502 Jet-Main (Standard)(Right) (Nikki) (Used Before Code Date 04071200 and After Code Date 04080300). Used on Type No(s). 0139.
117D	**690232**	Jet-Main (Standard) (Used Before Code Date 04091500). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160.
		------ Note ------
		690232 Jet-Main (Standard) (Used Before Code Date 04080400). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162.
		690232 Jet-Main (Standard) (Used After Code Date 04071100 and Before Code Date 04080400). Used on Type No(s). 0139.

REF. NO.	PART NO.	DESCRIPTION
118	**695415**	Jet-Main (High Altitude)(Left) (Nikki) Used on Type No(s). 0100, 0102, 0113, 0121, 0132, 0163, 0164, 0165, 0167, 0168, 0169, 0170, 0172, 0173, 0442, 0496, 0503, 0579, 0686, 0724, 0737, 0784, 0802, 0803, 0832, 0885, 0888, 0872, 0954, 0958, 0959, 0960, 1163, 1216, 1239, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5113, 5121, 5169, 5170.
		------ Note ------
		699487 Jet-Main (High Altitude)(Left) (Nikki) Used on Type No(s). 5216, 5271, 5442, 6113, 6121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
		695415 Jet-Main (High Altitude)(Left) (Nikki) (Used After Code Date 04091400). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160.
		695415 Jet-Main (High Altitude)(Left) (Nikki) (Used After Code Date 04080300). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162.

REF. NO.	PART NO.	DESCRIPTION
		695415 Jet-Main (High Altitude)(Left) (Nikki) (Used Before Code Date 04071200 and After Code Date 04080300). Used on Type No(s). 0139.
118A	**843099**	Jet-Main (High Altitude)(Right) (Nikki) Used on Type No(s). 0100, 0102, 0113, 0121, 0132, 0163, 0164, 0165, 0167, 0168, 0169, 0170, 0172, 0173, 0442, 0496, 0503, 0579, 0686, 0724, 0737, 0784, 0802, 0803, 0832, 0885, 0888, 0872, 0954, 0958, 0960, 1163, 1216, 1239, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5113, 5121, 5169, 5170.
		------ Note ------
		843099 Jet-Main (High Altitude)(Right) (Nikki) Used on Type No(s). 5216, 5271, 5442, 6113, 6121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
		843099 Jet-Main (High Altitude)(Right) (Nikki) (Used After Code Date 04091400). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160.

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
		843099 Jet-Main (High Altitude)(Right) (Used After Code Date 04080300). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162. (Nikki)
		843099 Jet-Main (High Altitude)(Right) (Nikki) (Used Before Code Date 04071200 and After Code Date 04080300). Used on Type No(s). 0139.
118D	**690989**	Jet-Main (High Altitude) (Used Before Code Date 04091500). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160.
		------ Note ------
		690989 Jet-Main (High Altitude) (Used Before Code Date 04080400). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162.
		690989 Jet-Main (High Altitude) (Used After Code Date 04071100 and Before Code Date 04080400). Used on Type No(s). 0139.
121	**797890**	Kit-Carburetor Overhaul
122	**690952**	Spacer-Carburetor (Used Before Code Date 00102000). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160.

REF. NO.	PART NO.	DESCRIPTION
125	**791230**	Carburetor (Manual Choke)
		------ Note ------
		796258 Carburetor (Choke-A-Matic) Used on Type No(s). 0121, 0132, 0168, 0170, 0172, 0173, 0442, 0724, 1239, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5121, 5170.
		796227 Carburetor (Choke-A-Matic) Used on Type No(s). 5216, 5271, 5442, 6113, 5121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
130	**690993**	Valve-Throttle
131	**499805**	Kit-Throttle Shaft

REF. NO.	PART NO.	DESCRIPTION
133	**699724**	Float-Carburetor
135	**699729**	Tube-Fuel Transfer Used on Type No(s). 00100, 0102, 0113, 0121, 0132, 0163, 0164, 0165, 0167, 0168, 0169, 0170, 0172, 0173, 0442, 0496, 0503, 0579, 0686, 0724, 0737, 0784, 0802, 0803, 0832, 0885, 0888, 0872, 0954, 0958, 0959, 0960, 1163, 1216, 1239, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5113, 5121, 5169, 5170, 5216, 5271, 5442, 6113, 6121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
		------ Note ------
		699729 Tube-Fuel Transfer (Used After Code Date 04091400). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160.
		699729 Tube-Fuel Transfer (Used After Code Date 04080300). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162.
		699729 Tube-Fuel Transfer (Used Before Code Date 04071200 and After Code Date 04080300). Used on Type No(s). 0139.

Not for Reproduction

406700

REF. NO.	PART NO.	DESCRIPTION
135A	**499803**	Tube-Fuel Transfer (Used Before Code Date 04091500). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160. **------ Note ------** **499803** Tube-Fuel Transfer (Used Before Code Date 04080400). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162. **499803** Tube-Fuel Transfer (Used After Code Date 04071100 and Before Code Date 04080400). Used on Type No(s). 0139.
137	**690994**	Gasket-Float Bowl
141	**796228**	Kit-Choke Shaft
142	**699726**	Nozzle-Carburetor (Standard) Used on Type No(s). 0100, 0102, 0113, 0121, 0132, 0163, 0164, 0165, 0167, 0168, 0169, 0170, 0172, 0173, 0442, 0496, 0503, 0579, 0686, 0724, 0737, 0784, 0802, 0803, 0832, 0885, 0888, 0872, 0954, 0958, 0960, 1163, 1216, 1239, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5113, 5121, 5169, 5170, 5216, 5271, 5442, 6113, 6121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959. **------ Note ------** **699726** Nozzle-Carburetor (Standard) (Used After Code Date 04091400). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160. **699726** Nozzle-Carburetor (Used After Code Date 04080300). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162. **699726** Nozzle-Carburetor (Used Before Code Date 04071200 and After Code Date 04080300). Used on Type No(s). 0139.
142A	**499808**	Nozzle-Carburetor (Standard) (Used Before Code Date 04091500). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160. **------ Note ------** **499808** Nozzle-Carburetor (Standard) (Used Before Code Date 04080400). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162. **499808** Nozzle-Carburetor (Standard) (Used After Code Date 04071100 and Before Code Date 04080400). Used on Type No(s). 0139.
146	**690979**	Key-Timing
150	**841649**	Gasket-Nozzle

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
160	**699727**	Retainer-Solenoid Used on Type No(s). 0100, 0102, 0113, 0121, 0132, 0163, 0164, 0165, 0167, 0168, 0169, 0170, 0172, 0173, 0442, 0496, 0503, 0579, 0686, 0724, 0737, 0784, 0802, 0803, 0832, 0885, 0888, 0872, 0954, 0958, 0960, 1163, 1216, 1239, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5113, 5121, 5169, 5170. **------ Note ------** **699727** Retainer-Solenoid (Used After Code Date 04091400). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160. **699727** Retainer-Solenoid (Used After Code Date 04080300). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162. **699727** Retainer-Solenoid (Used Before Code Date 04071200 and After Code Date 04080300). Used on Type No(s). 0139.
160A	**690996**	Retainer-Solenoid (Used Before Code Date 04091500). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160. **------ Note ------** **690996** Retainer-Solenoid (Used Before Code Date 04080400). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162. **690996** Retainer-Solenoid (Used After Code Date 04071100 and Before Code Date 04080400). Used on Type No(s). 0139.
163	**691001**	Gasket-Air Cleaner
165	**693148**	Nut (Ring Gear)
186	**795985**	Connector-Hose
186B	**799158**	Connector-Hose (EVAP)
187A	**791766**	Line-Fuel (Cut To Required Length)
187D	**791744**	Line-Fuel (Formed)(Cut To Required Length)
187E	**791801**	Line-Fuel (Formed)(Cut To Required Length)
188	**691108**	Screw (Control Bracket)
192	**690083**	Adjuster-Rocker Arm
209	**793339**	Spring-Governor Used on Type No(s). 0165, 0503, 0579, 0832, 0872, 0958. **------ Note ------** **793340** Spring-Governor Used on Type No(s). 0128, 0139, 0162, 0784, 0803, 0954, 0960. **790034** Spring-Governor Used on Type No(s). 0115, 0116, 0136, 0151, 0158. **795086** Spring-Governor Used on Type No(s). 0027, 0100, 0102. **692909** Spring-Governor Used on Type No(s). 0130, 0157, 0160. **691018** Spring-Governor Used on Type No(s). 0117, 0127. **793342** Spring-Governor Used on Type No(s). 0120, 0163, 1163. **693102** Spring-Governor Used on Type No(s). 0144, 0154. **793341** Spring-Governor Used on Type No(s). 0164. **698071** Spring-Governor Used on Type No(s). 0138. **793527** Spring-Governor Used on Type No(s). 0114, 0118, 0119, 0496. **799169** Spring-Governor Used on Type No(s). 0121, 2271, 3216, 5121, 5169, 5170, 5216, 5271, 6121, 6169.

Not for Reproduction

406700

REF. NO.	PART NO.	DESCRIPTION
		798921 Spring-Governor Used on Type No(s). 0885, 0959, 1518, 1584, 2442, 2724, 4442, 5442, 6132, 6216, 6271, 6442, 6518, 6724, 6737, 6885, 6959.
		799170 Spring-Governor Used on Type No(s). 0172, 0173, 0888, 5113, 6113, 6173, 6802, 6888.
		798921 Spring-Governor (Used After Code Date 10072200). Used on Type No(s). 0132, 0442, 0724, 0737, 1216, 1239, 1271, 1404.
		693102 Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0132.
		796224 Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0442, 0724, 0737, 1216, 1239, 1271, 1404.
		799169 Spring-Governor (Used After Code Date 10072200). Used on Type No(s). 0168, 0169, 0170.
		797826 Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0168, 0169, 0802.
		793343 Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0170.
		799170 Spring-Governor (Used After Code Date 10072200). Used on Type No(s). 0113, 0167, 0686, 0802.
		796658 Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0113.
		793527 Spring-Governor (Used Before Code Date 10072300). Used on Type No(s). 0167, 0686.
211	**691019**	Spring-Governed Idle Used on Type No(s). 0027, 0100, 0102, 0114, 0115, 0116, 0118, 0119, 0120, 0121, 0127, 0128, 0130, 0136, 0138, 0139, 0144, 0151, 0154, 0157, 0158, 0160, 0162, 0163, 0164, 0165, 0167, 0168, 0172, 0173, 0496, 0503, 0579, 0686, 0784, 0803, 0832, 0872, 0885, 0888, 0954, 0958, 0960, 1163, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5113, 5121, 5169, 5170, 5216, 5271, 5442, 6113, 6121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959. **------ Note ------** **691019** Spring-Governed Idle (Used After Code Date 10072200). Used on Type No(s). 0113, 0132, 0168, 0169, 0170, 0442, 0724, 0737, 0802, 1216, 1239, 1271, 1404.
		796225 Spring-Governed Idle (Used Before Code Date 10072300). Used on Type No(s). 0113, 0132, 0168, 0169, 0170, 0442, 0724, 0737, 0802, 1216, 1239, 1271, 1404.
212	**695238**	Link-Throttle
213	**691021**	Bracket-Choke Control
216	**691022**	Link-Choke (Manual)
216A	**796229**	Link-Choke (Choke-A-Matic)
217	**799771**	Spring-Choke Return
219	**793338**	Gear-Governor
221	**841026**	Cup-Governor
220	**799772**	Washer (Governor Gear)
222	**698787**	Bracket-Control (EU Manual Choke) Used on Type No(s). 0784, 0803, 0954, 0960.
222A	**698761**	Bracket-Control (Manual Choke) Used on Type No(s). 0027, 0100, 0102, 0114, 0115, 0116, 0118, 0119, 0120, 0128, 0130, 0136, 0138, 0139, 0144, 0151, 0154, 0157, 0158, 0160, 0162, 0163, 0164, 0165, 0167, 0496, 0503, 0579, 0686, 0832, 0872, 0958, 1163.
222B	**796630**	Bracket-Control (Manual Choke) (Used Before Code Date 10072300). Used on Type No(s). 0113, 0169, 0737, 0802, 1216, 1271.
222C	**796226**	Bracket-Control (Choke-A-Matic) (Used Before Code Date 10072300). Used on Type No(s). 0132, 0168, 0170, 0442, 0724, 1239, 1404.

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
222D	**798916**	Bracket-Control (Manual Choke) Used on Type No(s). 0885, 0888, 0959, 5113, 5169, 6113, 6169, 6216, 6271, 6737, 6802, 6885, 6888, 6959. **------ Note ------** **798916** Bracket-Control (Manual Choke) (Used After Code Date 10072200). Used on Type No(s). 0113, 0169, 0737, 0802, 1216, 1271.
222E	**798915**	Bracket-Control (Choke-A-Matic) Used on Type No(s). 0121, 0172, 0173, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5121, 5170, 5216, 5271, 5442, 6121, 6132, 6173, 6442, 6518, 6724. **------ Note ------** **798915** Bracket-Control (Choke-A-Matic) (Used After Code Date 10072200). Used on Type No(s). 0132, 0168, 0170, 0442, 0724, 1239, 1404.
227	**798856**	Lever-Governor Control
231	**690718**	Screw (Choke Valve)
239	**792028**	Switch-Oil Pressure
240A	**691035**	Filter-Fuel (Includes A Paper Element With A 40 Micron Rating)
240B	**695666**	Filter-Fuel (Includes A Paper Element With A 30 Micron Rating)
250	**794389**	Retainer-Breather
252	**690956**	Collector-Oil
265	**691024**	Clamp-Casing
267B	**792629**	Screw (Casing Clamp)
276	**690997**	Washer-Sealing (Fiber)
276A	**695410**	Washer-Sealing (Aluminum Bowl) **------ Note ------** **794271** Washer-Sealing (Steel Bowl)
278	**792651**	Washer (Governor Control Lever)
287	**697820**	Screw (Dipstick Tube)
304	**790688**	Housing-Blower (Black-Compatible With Panel Style Filter) (Used After Code Date 04100500 and Before Code Date 06103000). **------ Note ------** **790688** Housing-Blower (Black) Used on Type No(s). 0164, 0784, 0803, 0832, 0872.
304A	**799954**	Housing-Blower (Black-Compatible With Panel Style Filter) (Used After Code Date 06102900).
304B	**790692**	Housing-Blower (Black-Compatible With Panel Style Filter) (Used Before Code Date 04100600).
304G	**591656**	Housing-Blower (Black-Compatible With Canister Style Filter) Used on Type No(s). 5216, 5271, 5442, 6113, 6121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
305	**691005**	Screw (Blower Housing)
305A	**698336**	Screw (Blower Housing) Used on Type No(s). 0164.
305B	**790690**	Screw (Blower Housing To Intake Elbow)
306	**796852**	Shield-Cylinder (Cylinder #1)
306A	**798855**	Shield-Cylinder (Used After Code Date 10052300). (Cylinder #2) (EVAP Fitting Compatible) **------ Note ------** **796541** Shield-Cylinder (Cylinder #2) (Used Before Code Date 10052400 and After Code Date 08080300). **793205** Shield-Cylinder (Cylinder #2) (Used Before Code Date 08080400).
307	**691003**	Screw (Cylinder Shield)
307A	**691108**	Screw (Cylinder Shield)
309	**795121**	Motor-Starter **------ Note ------** **497595** Motor-Starter Used on Type No(s). 0132, 0139, 0442, 0496, 0503, 0686, 0724, 0737, 0784, 0802, 0803, 0832. 0872, 0885, 0888, 0954, 0958, 0959, 0960, 1216, 1239, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5216, 5271, 5442, 6132, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
309A	**590476**	Motor-Starter Used on Type No(s). 0173, 5113, 5121, 5169, 5170.

Not for Reproduction

406700

REF. NO.	PART NO.	DESCRIPTION
310	**691263**	Screw (Starter Motor) **------ Note ------** **690323** Screw (Starter Motor) Used on Type No(s). 0132, 0139, 0442, 0496, 0503, 0686, 0724, 0737, 0784, 0802, 0803, 0832, 0872, 0885, 0888, 0954, 0958, 0959, 0960, 1216, 1239, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5216, 5271, 5442, 6132, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
311	**497608**	Brush Set
332	**691059**	Nut (Flywheel)
333	**799651**	Armature-Magneto
334	**691061**	Screw (Magneto Armature)
337	**491055S**	Plug-Spark **------ Note ------** **691043** Plug-Spark Used on Type No(s). 0027, 0113, 0114, 0116, 0117, 0118, 0119, 0120, 0127, 0132, 0138, 0144, 0151, 0154, 0157, 0160, 0162, 0163, 0164, 0167, 0169, 0503, 0737, 0784, 0803, 0885, 0954, 0959, 0960, 1163, 1216, 1271, 1518, 1584, 2271, 3216, 5113, 5169, 5216, 5271, 6113, 6132, 6169, 6216, 6271, 6518, 6737, 6885. **792015** Plug-Spark Used on Type No(s). 0121, 0168, 0170, 0172, 0173, 0496, 0686, 0802, 0888, 5121, 5170, 6121, 6173, 6802, 6888. **696202** Plug-Spark Used on Type No(s). 0832, 0958, 1239.
357	**691483**	Key-Drive Pulley
358A	**694012**	Gasket Set-Engine
363	**19203**	Puller-Flywheel
383	**19576S**	Wrench-Spark Plug
385	**691108**	Screw (Fuel Pump Mounted To Fuel Pump Bracket) **------ Note ------** **797409** Screw (Fuel Pump Mounted To Blower Housing)
387	**808656**	Pump-Fuel
404	**690442**	Washer (Governor Crank)
405A	**697820**	Screw
415	**794903**	Plug
418	**795912**	Plate-Carburetor
431B	**798859**	Elbow-Intake (EVAP) (Used After Code Date 04080300).
431C	**691011**	Elbow-Intake (Used Before Code Date 04080400).
431G	**591661**	Elbow-Intake (EVAP) Used on Type No(s). 5216, 5271, 5442, 6113, 6121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
445	**499486s**	Filter-Air Cleaner Cartridge (Flat Panel)
445A	**792101**	Filter-Air Cleaner Cartridge (Flat Panel) Used on Type No(s). 0958, 1239.
445E	**591334**	Filter-Air Cleaner Cartridge (Canister) Used on Type No(s). 5216, 5271, 5442, 6113, 5121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
447	**691003**	Screw (Air Guide Cover)
462	**691261**	Washer (Starter Cable)
467	**790697**	Knob-Air Cleaner (1" Long)
467A	**691008**	Knob-Air Cleaner (1 1/2" Long)
467C	**591660**	Knob-Air Cleaner (7/8" Long)
474B	**696459**	Alternator (Dual Circuit) Used on Type No(s). 0100, 0102, 0115, 0116, 0132, 0136, 0164, 0165, 0442, 0496, 0503, 0579, 0686, 0724, 0737, 0802, 0803, 0872, 0885, 0888, 0959, 0960, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 4442, 5271, 5442, 6132, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
474C	**696457**	Alternator (5/9 Amp. Regulated Or Tri-Circuit) Used on Type No(s). 0113, 0114, 0117, 0120, 0121, 0130, 0157, 0158, 0160, 0163, 0168, 0169, 0170, 0172, 0173, 1163, 5113, 5121, 5169, 5170, 6113, 6121, 6169, 6173.
474D	**696458**	Alternator (10-16 Amp. Regulated) Used on Type No(s). 0027, 0118, 0119, 0127, 0128, 0138, 0139, 0144, 0151, 0154, 0162, 0167, 0784, 0832, 0954, 0958, 1216, 1239, 3216, 5216, 6216.
501A	**794360**	Regulator (5/9 Amp.)
501D	**797375**	Regulator (10-16 Amp.)
503	**691532**	Strap-Starter
505	**691029**	Nut (Governor Control Lever)
510	**696541**	Drive-Starter
513	**692024**	Clutch-Drive
523	**691036**	Dipstick
524	**691032**	Seal-Dipstick Tube
525	**691037**	Tube-Dipstick
526A	**691129**	Screw (Regulator)
526B	**691108**	Screw (Regulator)
552	**796638**	Bushing-Governor Crank
552A	**690553**	Bushing-Governor Crank
562	**690311**	Bolt (Governor Control Lever)
563A	**799359**	Screw (Debris Guard)
573	**790444**	Plate-Back
578A	**691208**	Wire Assembly (18" Long-Used On Cylinder #2 Mounted Regulator) **------ Note ------** **797463** Wire Assembly (14" Long-Used On Cylinder #1 Mounted Regulator)
579	**691029**	Nut (Starter Cable)
601	**791850**	Clamp-Hose (Green) **------ Note ------** **691038** Clamp-Hose (Black)
613	**690341**	Screw (Muffler)
613A	**690297**	Screw (Muffler)
615	**698290**	Retainer-Governor Shaft
616	**691045**	Crank-Governor
617	**697891**	Seal-O Ring (Intake Manifold)
633	**699813**	Seal-Choke/Throttle Shaft (Choke-A-Matic) **------ Note ------** **690998** Seal-Choke/ Throttle Shaft (Manual Choke)
635	**692076**	Boot-Spark Plug
654	**690958**	Nut (Carburetor)
668	**691500**	Spacer
668A	**691215**	Spacer
672	**690234**	Gasket-Carburetor Plate
691	**790574**	Seal-Governor Shaft
695	**693149**	Screw (Ring Gear)
697	**591909**	Screw (Drive Cap)
703	**691010**	Clip
710	**697474**	Cover-Oil Filter Used on Type No(s). 0102.
718	**690959**	Pin-Locating
726	**499612**	Gear-Ring
729	**694123**	Clip-Wire
729A	**797454**	Clip-Wire
741	**690980**	Gear-Timing
742	**690328**	Retainer-E Ring
750	**696999**	Screw (Oil Pump Cover) (Used Before Code Date 08071800).
750B	**796208**	Screw (Oil Pump Cover) (Used After Code Date 08071700).
783	**695708**	Gear-Pinion
788	**691039**	Bracket-Fuel Pump (Used Before Code Date 06081500).
788A	**793145**	Bracket-Fuel Pump (Used After Code Date 06081400).
789B	**698330**	Harness-Wiring (6 Pin, #2 Side Regulator. Without EFM. Wire Assembly Includes Green Oil Pressure Switch Wire. Remove If Not Needed. Service Kit Includes Red Regulator To 2 Pin Jumper Wire.)
789D	**591391**	Harness-Wiring (2 Pin, #1 And #2 Side Regulator. Without EFM.) (Used After Code Date 12042200). **------ Note ------** **691220** Harness-Wiring (2 Pin, #1 And #2 Side Regulator. Without EFM.) (Used Before Code Date 12042300).

Not for Reproduction

406700

REF. NO.	PART NO.	DESCRIPTION
789J	**591392**	Harness-Wiring (6 Pin, #1 Side Regulator. Without EFM. Without Oil Pressure Switch.) (Used After Code Date 12042200). **------ Note ------** **797424** Harness-Wiring (6 Pin, #1 Side Regulator. Without EFM. Without Oil Pressure Switch.) (Used Before Code Date 12042300).
789K	**591393**	Harness-Wiring (6 Pin, #1 Side Regulator. Without EFM. Without Oil Pressure Switch. Wire Assembly Includes Green Oil Pressure Switch Wire.) (Used After Code Date 12042200). **------ Note ------** **797460** Harness-Wiring (6 Pin, #1 Side Regulator. Without EFM. Without Oil Pressure Switch. Wire Assembly Includes Green Oil Pressure Switch Wire.) (Used Before Code Date 12042300).
797	**693167**	Nut (Brush Retainer)
798	**697890**	Screw (Rocker Arm)
801	**691283**	Cap-Drive
802	**691286**	Cap-End
842	**691031**	Seal-O Ring (Dipstick Tube)
851	**493880s**	Terminal-Spark Plug
865B	**691015**	Cover-Air Guide (Valley) Used on Type No(s). 0027, 0100, 0102, 0108, 0113, 0114, 0115, 0116, 0117, 0118, 0119, 0120, 0121, 0127, 0128, 0130, 0132, 0136, 0138, 0139, 0144, 0151, 0154, 0157, 0158, 0160, 0162, 0162, 0163, 0164, 0165, 0167, 0168, 0169, 0170, 0172, 0173, 0442, 0496, 0503, 0579, 0686, 0724, 0737, 0784, 0802, 0803, 0832, 0872, 0885, 0888, 0954, 0958, 0959, 0960, 1163, 1216, 1239, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5113, 5121, 5169, 5170.
865C	**792286**	Cover-Air Guide (Valley) Used on Type No(s). 5216, 5271, 5442, 6113, 6121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
868	**690968**	Seal-Valve
877	**393456**	Wire/Connector-Alternator
877B	**393537**	Wire/Connector-Alternator
877C	**399916**	Wire/Connector-Alternator
877D	**790544**	Wire/Connector-Alternator
878	**398661**	Harness-Alternator
878A	**691955**	Harness-Alternator
883	**690970**	Gasket-Exhaust
914	**691127**	Screw (Rocker Cover)
918	**793147**	Hose-Vacuum (Formed)
918A	**797408**	Hose-Vacuum (Length 3.2 Inches) **------ Note ------** **694000** Hose-Vacuum (Length 1.6 Inches)
918B	**799160**	Hose-Vacuum (Length 9.4 Inches)
929	**695239**	Screw (Choke Control Bracket)
943	**690589**	Seal-O Ring (Oil Pump Cover) (Used Before Code Date 08071800).
943A	**796222**	Seal-O Ring (Oil Pump Cover) (Used After Code Date 08071700). **------ Note ------** **796222** Seal-O Ring (Oil Pump Cover) Used on Type No(s). 0139.
947	**798779**	Solenoid-Fuel (Used On Double Barrel Aluminum Bowl Carburetors) **------ Note ------** **NOT AVAILABLE** Solenoid-Fuel (Used After Code Date 04080300). Used On Double Barrel Steel Bowl Carburetors) (Must Service With Reference 975 Bowl/Solenoid Kit)

Not for Reproduction

REF. NO.	PART NO.	DESCRIPTION
947A	**499809**	Solenoid-Fuel (Used Before Code Date 04080400). (Used On Double Barrel Steel Bowl Carburetors)
949A	**798767**	Guard-Debris Screen
958	**698183**	Valve-Fuel Shut Off (Plastic)
964	**799159**	Cap-Connector
965	**499613**	Cover-Oil Pump (Used Before Code Date 08071800).
965A	**796221**	Cover-Oil Pump (Used After Code Date 08071700).
967	**273638S**	Filter-Pre Cleaner
968A	**790689**	Cover-Air Cleaner (Black-Compatible With Panel Style Filter) Used on Type No(s). 0164, 0784, 0803, 0832, 0872. **------ Note ------** **790689** Cover-Air Cleaner (Used After Code Date 04100500 and Before Code Date 06103000). Used on Type No(s). 0027, 0119, 0120, 0144, 0151, 0154. **790689** Cover-Air Cleaner (Used After Code Date 04080300 and Before Code Date 06103000).
968B		Cover-Air Cleaner (Black-Compatible With Panel Style Filter) (Used Before Code Date 04080400). (No Longer Available. See Reference 304B For Service Replacement) **------ Note ------** Cover-Air Cleaner (Black-Compatible With Panel Style Filter) (Used Before Code Date 04100600). Used on Type No(s). 0027, 0119, 0120, 0144, 0151, 0154. (No Longer Available. See Reference 304B For Service Replacement)
968C	**791242**	Cover-Air Cleaner (Black-Compatible With Panel Style Filter) Used on Type No(s). 0113, 0121, 0132, 0163, 0167, 0168, 0169, 0170, 0172, 0173, 0442, 0496, 0503, 0686, 0724, 0737, 0802, 0885, 0888, 0954, 0958, 0960, 1163, 1216, 1239, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5113, 5121, 5169, 5170. **------ Note ------** **791242** Cover-Air Cleaner (Black-Compatible With Panel Style Filter) (Used After Code Date 06102900).
968H	**591658**	Cover-Air Cleaner (Black-Compatible With Canister Style Filter) Used on Type No(s). 5216, 5271, 5442, 6113, 6121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
975	**798778**	Bowl-Float/Solenoid (Used After Code Date 04080300). (Used On Double Barrel Steel And Aluminum Bowl Carburetors)
975A	**499810**	Bowl-Float (Used Before Code Date 04080400) (Used On Double Barrel Steel Bowl Carburetors)
975C	**799914**	Bowl-Float Used on Type No(s). 5216, 5271, 5442, 6113, 6121, 6132, 6169, 6173, 6216, 6271, 6442, 6518, 6724, 6737, 6802, 6885, 6888, 6959.
987	**691000**	Seal-Throttle Shaft
1005	**791236**	Fan-Flywheel (Used After Code Date 06102900). **------ Note ------** **790698** Fan-Flywheel Used on Type No(s). 0164, 0784, 0803, 0832, 0872. **790698** Fan-Flywheel (Used After Code Date 04071900 and Before Code Date 06103000). **499603** Fan-Flywheel (Used Before Code Date 04072000).
1012	**797926**	Retainer-Link
1013	**690954**	Nipple-Oil Filter
1017	**690770**	Screen-Oil Pump (Used Before Code Date 08071800).
1017A	**796214**	Screen-Oil Pump (Used After Code Date 08071700).

Not for Reproduction

406700

REF. NO.	PART NO.	DESCRIPTION
1022	**690971**	Gasket-Rocker Cover
1023	**793146**	Cover-Rocker (Cylinder #1) (Used After Code Date 06090400).
		------ Note ------
		499599 Cover-Rocker (Cylinder #1) (Used Before Code Date 06090500).
1023A	**499600**	Cover-Rocker (Cylinder #2)
1024	**794664**	Pump-Oil (Used Before Code Date 08071800).
1024A	**796220**	Pump-Oil (Used After Code Date 08071700).
1026	**690981**	Rod-Push (Steel)
1026A	**690982**	Rod-Push (Aluminum)
1027	**492932S**	Filter-Oil (Standard)
		------ Note ------
		795890 Filter-Oil (Premium)
1029	**690972**	Arm-Rocker (Includes Reference 192)
1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
1040	**791237**	Plate-Trim
1051	**691265**	Ring-Retaining
1054	**280275**	Tie-Cable
1058	**381258**	Operator's Manual
1059	**698516**	Kit-Screw/Washer
1070	**791680**	Screw (Flywheel Fan)
1090	**691293**	Retainer-Brush
1095	**694013**	Gasket Set-Valve
1100	**791959**	Pivot-Rocker Arm
1119	**691183**	Screw (Alternator)
1123	**699725**	Seal-O Ring (Solenoid Retainer) Used on Type No(s). 0100, 0102, 0113, 0121, 0132, 0163, 0164, 0165, 0167, 0168, 0169, 0170, 0172, 0173, 0442, 0496, 0503, 0579, 0686, 0724, 0737, 0784, 0802, 0803, 0832, 0885, 0888, 0872, 0954, 0958, 0960, 1163, 1216, 1239, 1271, 1404, 1518, 1584, 2271, 2442, 2724, 3216, 4442, 5113, 5121, 5169, 5170.
		------ Note ------
		699725 Seal-O Ring (Solenoid Retainer) (Used After Code Date 04091400). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160.
		699725 Seal-O Ring (Solenoid Retainer) (Used After Code Date 04080300). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162.
		690987 Seal-O Ring (Solenoid Retainer) (Used Before Code Date 04091500). Used on Type No(s). 0027, 0117, 0119, 0120, 0127, 0144, 0151, 0154, 0160.
		690987 Seal-O Ring (Solenoid Retainer) (Used Before Code Date 04080400). Used on Type No(s). 0108, 0114, 0115, 0116, 0118, 0128, 0130, 0136, 0138, 0157, 0158, 0162.
		699725 Seal-O Ring (Solenoid Retainer) (Used Before Code Date 04071200 and After Code Date 04080300). Used on Type No(s). 0139.
		690987 Seal-O Ring (Solenoid Retainer) (Used After Code Date 04071100 and Before Code Date 04080400). Used on Type No(s). 0139.
1124	**690988**	Seal-O Ring (Fuel Transfer Tube)
1124A	**841653**	Seal-O Ring (Fuel Transfer Tube)
1126	**690991**	Screw (Fuel Transfer Tube)
1127	**695407**	Screw (Aluminum Float Bowl)
1127A	**690992**	Screw (Steel Float Bowl)
1128	**690990**	Screw (Carburetor Nozzle)
1169	**690990**	Screw (Carburetor Cover Plate)
1319	**794467**	Label-Warning
1319A	**797669**	Label-Warning
1330	**273521**	Repair Manual
1342A	**699731**	Extension-Fuel Transfer Tube (Used On Double Barrel Steel Bowl Carburetors)
1448	**690260**	Washer (Magneto Armature)

Not for Reproduction

Not for
Reproduction

Not for
Reproduction

BRIGGS & STRATTON